



Write your serial # here:




0PPDLAUBKN12236FFE

IMPORTANT:
Please write down serial # located on back of terminal before mounting.


TimeTrax™ Time and Attendance Software should not be installed on any Server or Virtual Machine. Pyramid Time Systems does not support the use of TimeTrax™ software on a Server or Virtual Machine.




English:
Regional setting and hardware input in English



ADMIN:
Must be the primary Admin to install software



Windows:
Windows 10 or greater
All Windows updates must be installed prior to software installation



Browser:
Updated Chrome or Firefox

Free Space:
20GB or greater

 
PC:
X64 Pentium IV 2.0 GHz or greater

Memory:
8GB RAM minimum, 16GB recommended


Operating System & Single User Installation

Software Requirements


What you will need.




Power Drill (Optional)



Phillips Head Screw Driver




 Pencil




Tape Measure

 
Contents

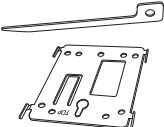


Security Bracket & Key




Ethernet Cable (CAT5)



 
TimeTrax™ Proximity Badges (15)
Part #42454




Power Supply



TTPROXEK Quick Start Guide



TTPROXEK Terminal



Mounting Hardware



Call us
888.479.7264



Send us an email
customer_support@ptitime.com



 
Quick Start Guide
SIMPLE : SMART®




TIMETRAX™ Elite • Prox ek
Proximity Time Clock System
TTPROXEK



Connect Terminal

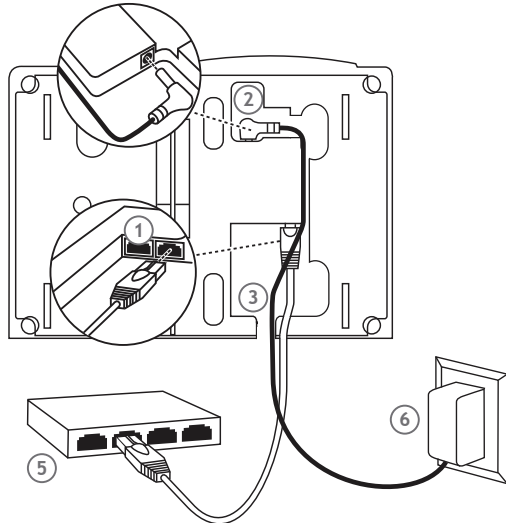

- 1 Connect either end of RJ45 cable into "ETHERNET" port located on the back of time clock terminal.
- 2 Connect power supply into "POWER" port located in compartment on back of terminal.
- 3 Route the cables through channel at base of terminal.
- 4 Mount terminal (see instructions below).
- 5 Plug free end of RJ45 cable into a DHCP network jack, router or switch.
- 6 Plug power supply into outlet.

 

Download TimeTrax™ Software

TimeTrax™ Software Download Information

For TimeTrax™ Version 5 software information please call 888 479-7264, ext. 800 or send email to customer_support@ptitime.com



 
TimeTrax™ Instructional Videos

Follow the instructions below to view our setup videos

- 1 In your web browser type in the following URL:
pyramidtimesystems.com/resources/videos
- 2 Scroll down to *TimeTrax Time and Attendance Software* and start with the **HARDWARE MANAGER** video.



Mount Terminal

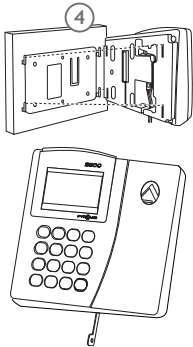

To mount terminal.

- Install mounting bracket using provided mounting screws. Be sure the four metal tabs are facing upward.
- Additional holes are provided if mounting onto an electrical box.
- Push terminal onto mounting bracket aligning four tabs on bracket with four matching slots on back of terminal. *Be sure to write down the terminal serial number before mounting.*
- Slide terminal downward until locking tab clicks into place. When properly mounted, terminal cannot be removed from the bracket without using the included wall bracket release key to disengage locking tab.
- Cables may be rooted through channel at base of terminal or by drilling a hole in the rectangular section of the mounting bracket and through the wall for concealing cables.

To detach terminal.

- Insert key (tab facing outward) into narrow slot located on bottom of terminal to right of cable access cutout.
- Push key all the way up into slot. Key will slide easily until last 1/2 inch until some resistance from locking tab is felt.
- With key fully pushed into slot, slide the terminal up and off mounting bracket.



Using Time Clock

Wave prox badge within two inches of target area.

If employee badge number is successfully read, the time clock terminal will beep and the badge number will be displayed briefly on terminal screen.

